

Connections

S-video connector – If you have a VCR/DVD player equipped with Super Video (s-Video) you can connect it to the projector using an s-video cable. This will provide video input for the projector. (This disables the yellow, white and red plugs)


Video Inputs- From the Video out on the VCR run a cable and connect to the Yellow plug in this panel. The red and white plugs connect to the audio out left and right plugs on the VCR. To select these as the type of input for the projector to display remember to use the **MODE** button on the operations panel.

Audio IN / OUT – by connecting the **out** plug from this to an external stereo you can use that for sound rather than the built in Eike speaker. If you want a computers sound to come through the EIKE speaker you would need to connect the sound card to the **IN** jack here.

Computer In – Connect the video card on the computer to the *computer in* port. If you have a newer computer you may have two video card output. You may connect the projector to the 2nd port, however this port will need to be activated in the display properties settings in control panel.

Control Port – A PS2 cable can be run from here to the mouse port on a computer. This will allow you to use the Eike remote to control the mouse functions of the PC. Be aware you need to point the remote at the Eike not the computer.

Monitor Out – Not all Eike projectors provide this option. This allows you to connect your monitor to the Eike so that you can view the computer image on both the Eike and the monitor rather than just one or the other.

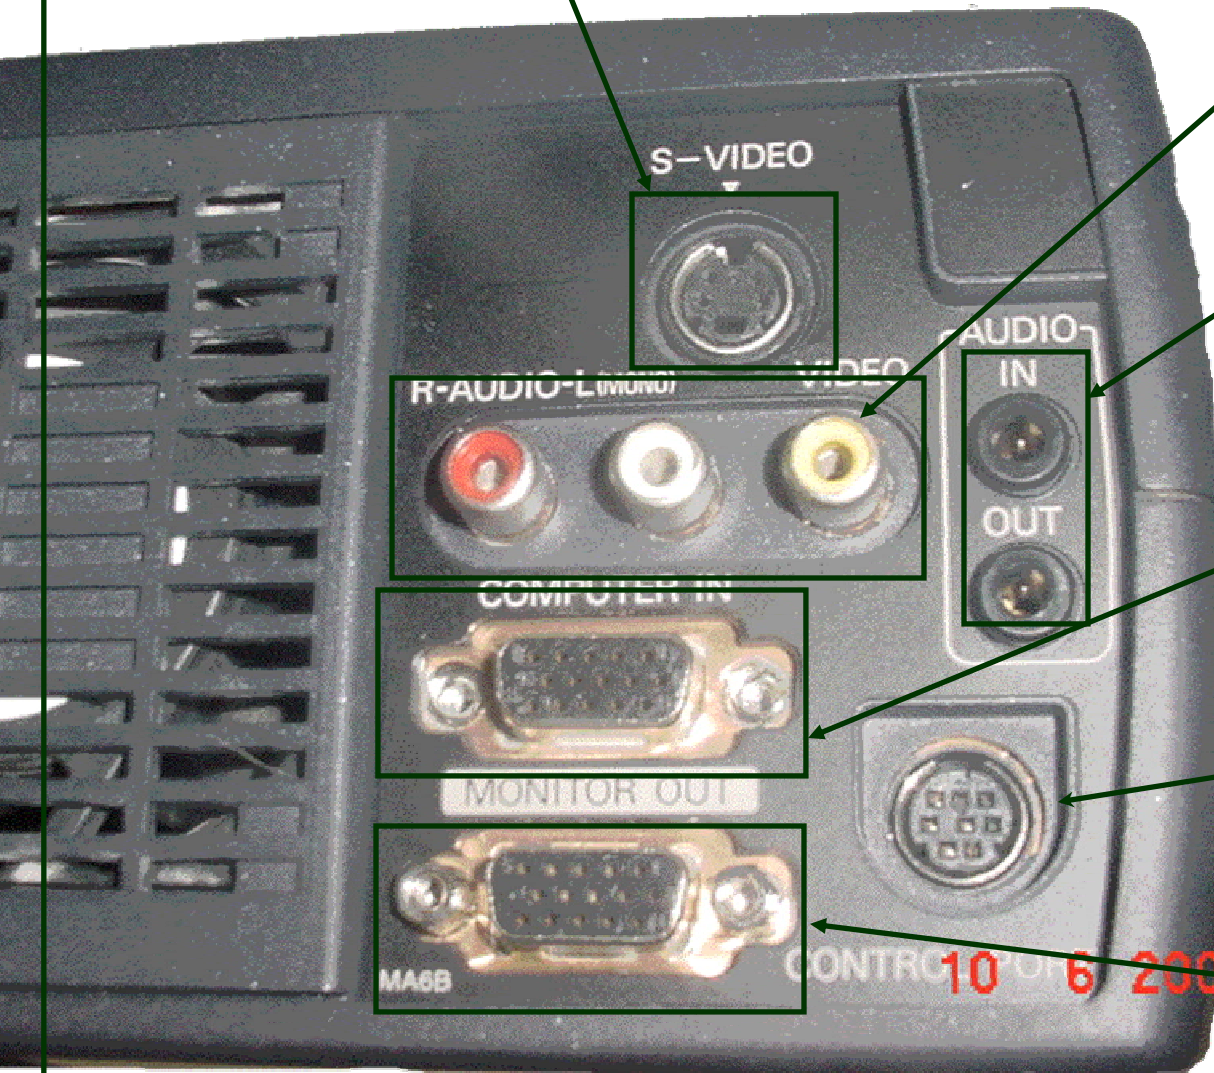

Eike LCD Projector

TopTips© John Bullington 2002



Shenendehowa Central
Schools

Operating Panel

Connect to a laptop

On the back of most laptops is a blue port, connect the Eike to that port. To activate that port so an image displays on the Eike hold down the purple FN key in the lower right of the keyboard and click the F8 key (should say CRT/LCD in purple on that key). This key combo toggles between laptop screen, Eike screen, and both screens. Set as desired.

Connect to a Black Dell Desktop

The dell has two plugs on the back labeled #1 and #2. Connect the Icon to #2(#1 is already used). To activate that port on the desktop of the computer, right click and choose properties. Next click the settings tab, then advanced, then displays. Display one and two appear. #2 has a red tab you need to click on to activate it.

Power Button – press this button once to turn the projector on. The projector will only come on after the bulb cooling cycle has finished (indicated by green light on panel)

OFF – Press the button once and a visual prompt on screen will say OFF? Press it again to shut off projector. *DO NOT UNPLUG* until fan cycle finishes.

Zoom and Focus – Some EIKE LCD projectors use a manual Zoom and Focus (like the model shown in picture). Other Eike's use a zoom button and a focus button in combination with the arrow keys. Press Zoom or Focus then use the up or down arrows to make adjustments.

Power Lamp Indicator – If this light is green then the projector has cooled down enough to unplug the unit or turn it back on. If the light is not green you will **NOT** be able to turn the projector on.

Menu Button - from this specific adjustments can be made to the projector. In almost all cases you do not need to adjust any of these settings.



Mode Button - The mode button is a two or three way toggle. By pressing once or more than once you cycle through what is displayed on the screen. **Video** – will show an image from a VCR/Cable box to the screen. **Computer** – will show the image from a computer connected to this machine. Additionally more advanced models will have other inputs for you to cycle through.